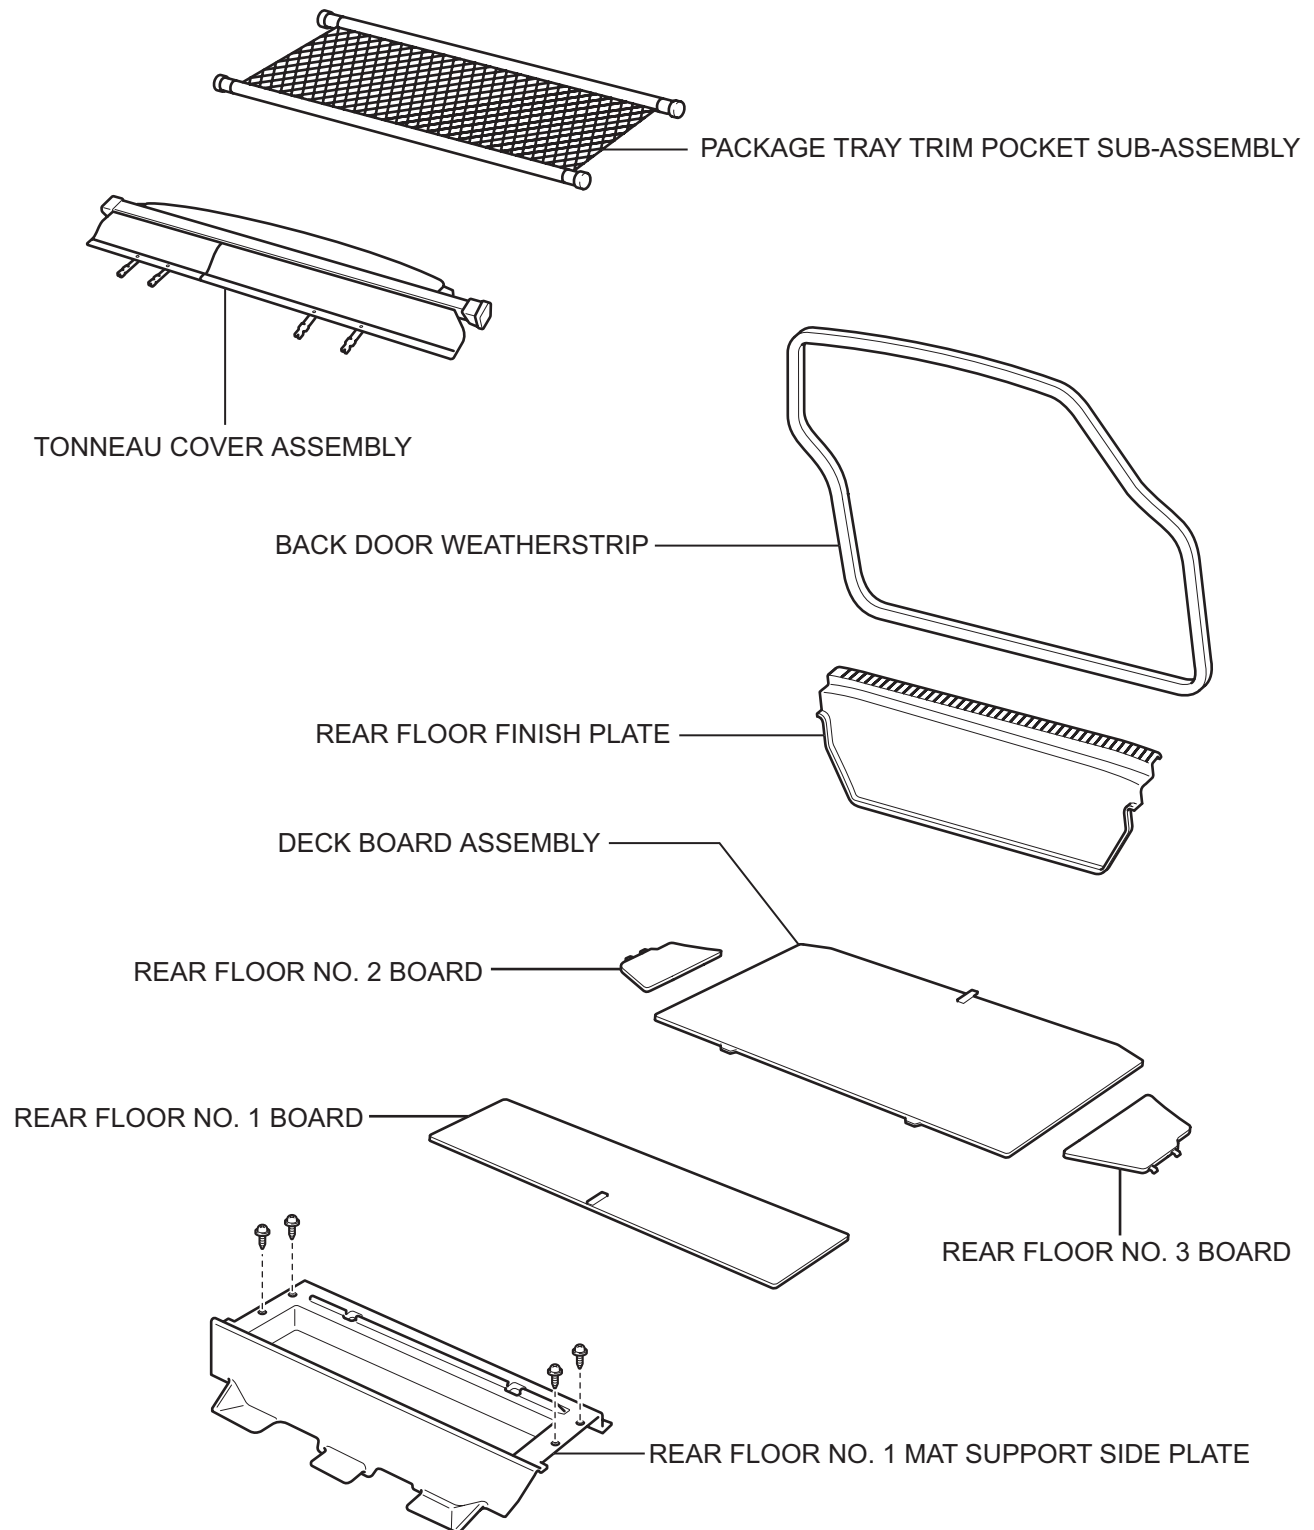


# REAR SEAT OUTER BELT ASSEMBLY

## COMPONENTS

w/o Rear No. 2 Seat

**SB**

w/o Rear No. 2 Seat

RECLINING REMOTE CONTROL LEVER BEZEL LH

REAR DOOR OPENING TRIM WEATHERSTRIP LH

INNER ROOF SIDE GARNISH ASSEMBLY LH

42 (428, 31)

8.5 (87, 75 in.\*lbf)

42 (428, 31)

42 (428, 31)

42 (428, 31)

ROPE HOOK

TETHER ANCHOR BRACKET  
SUB-ASSEMBLY

LAP BELT OUTER ANCHOR COVER


REAR NO. 1 SEAT BELT ASSEMBLY OUTER LH

REAR DOOR SCUFF PLATE LH

DECK TRIM SIDE PANEL ASSEMBLY LH


N\*m (kgf\*cm, ft.\*lbf) : Specified torque

w/ Rear No. 2 Seat

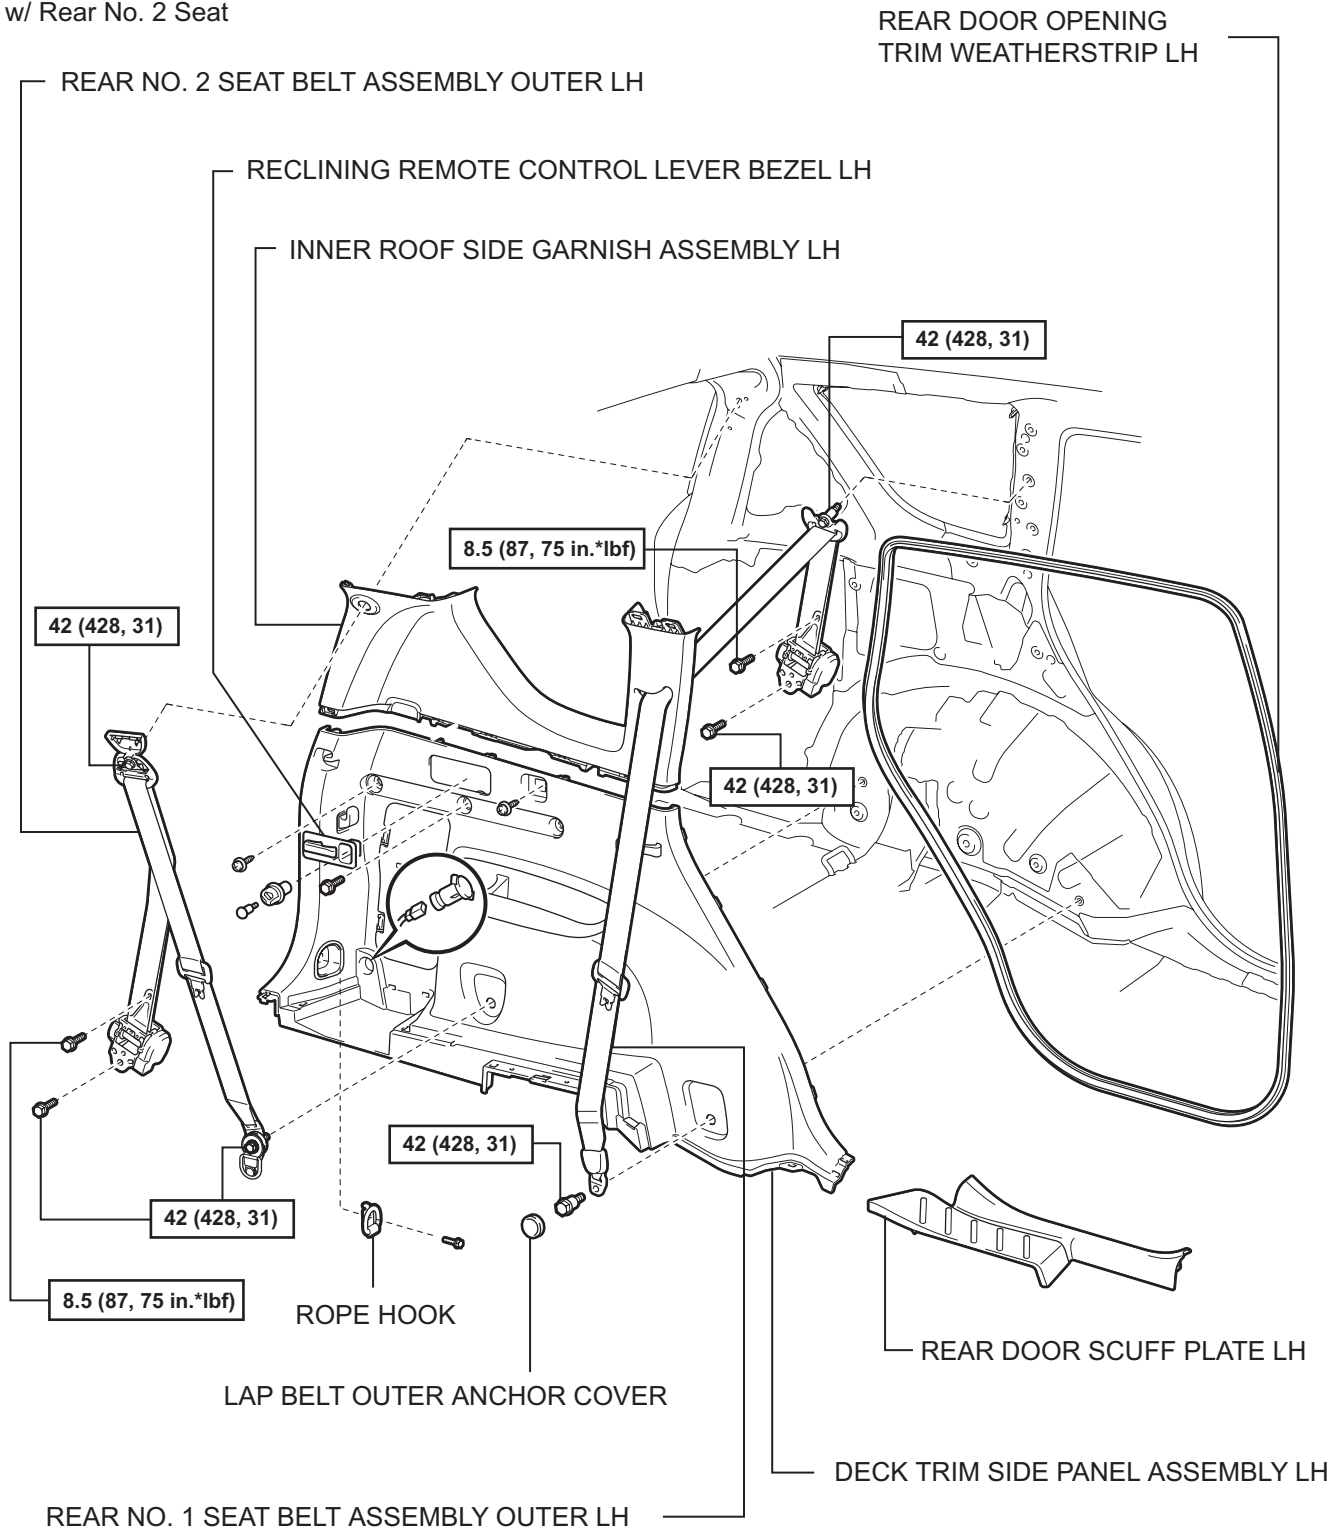

N\*m (kgf\*cm, ft.\*lbf) : Specified torque

w/ Rear No. 2 Seat

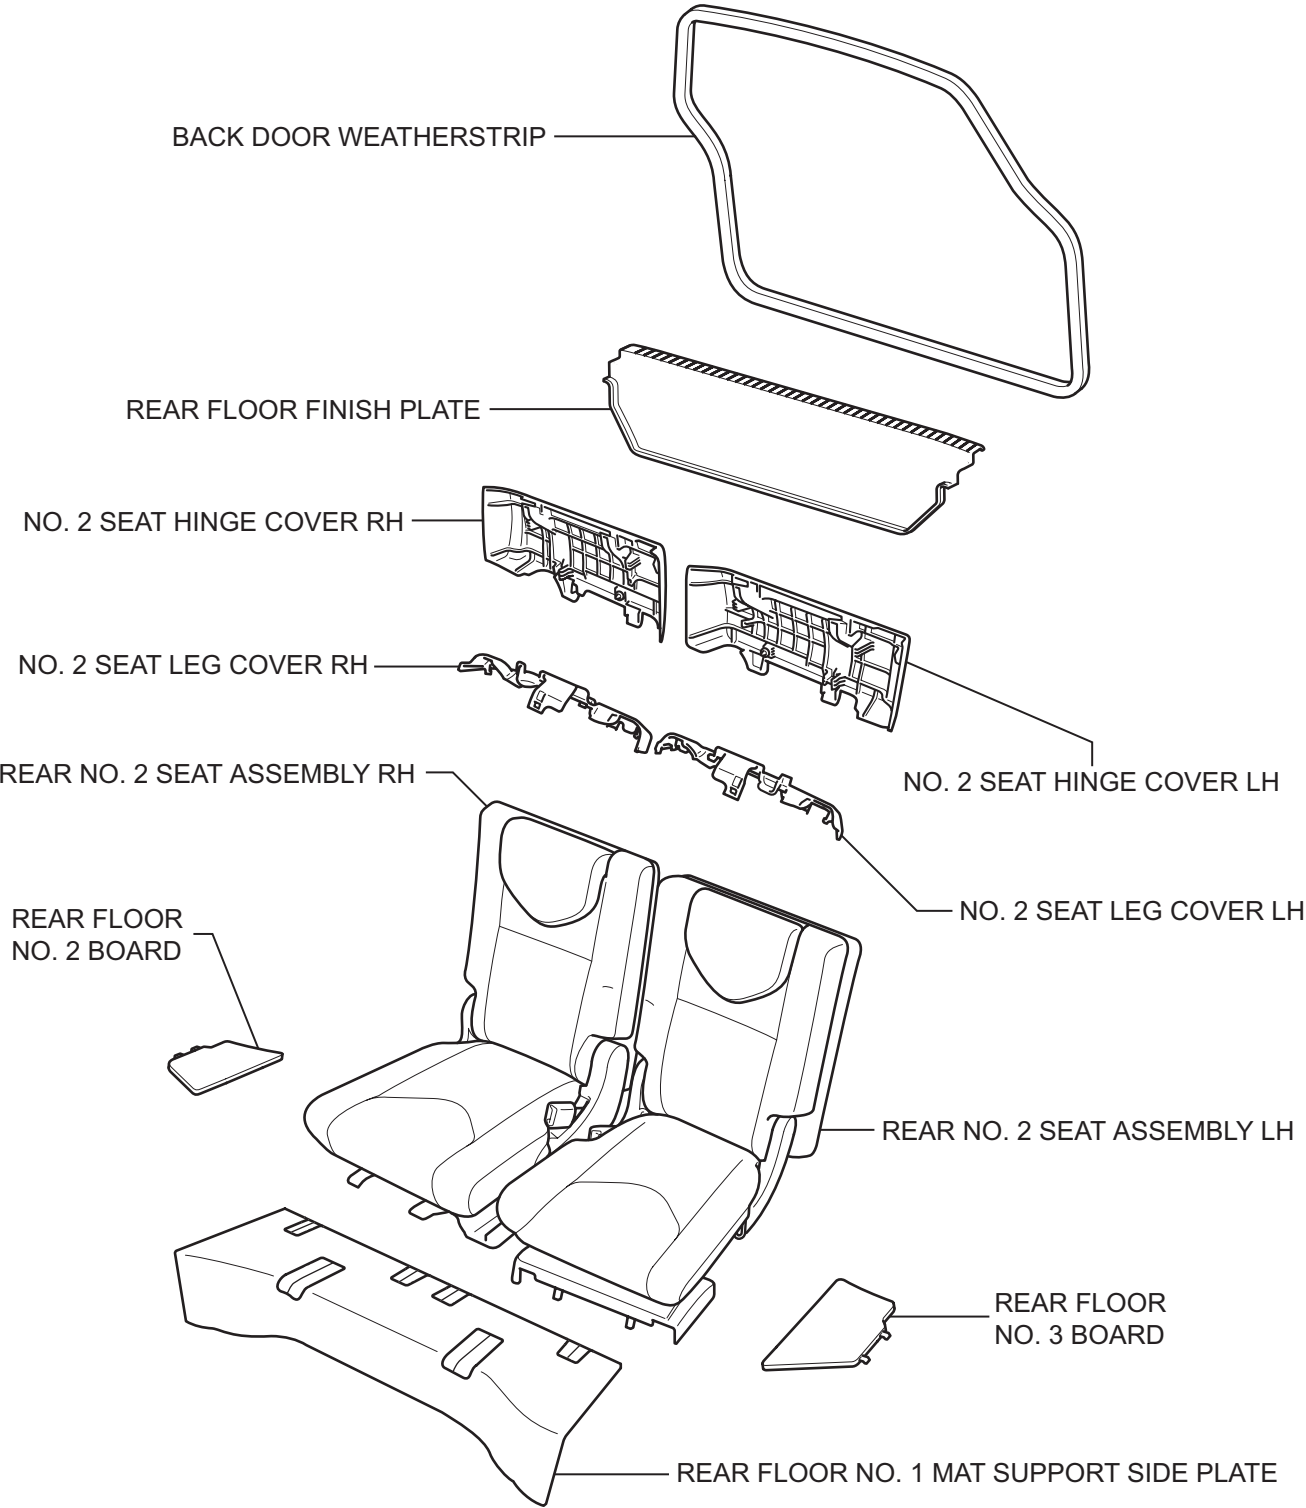

SB

## REMOVAL

### HINT:


- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

### 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

#### CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE REAR DOOR SCUFF PLATE LH (See page [IR-26](#))
3. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH
4. REMOVE PACKAGE TRAY TRIM POCKET SUB-ASSEMBLY (w/o Rear No. 2 Seat)
5. REMOVE TONNEAU COVER ASSEMBLY (w/o Rear No. 2 Seat)
6. REMOVE REAR FLOOR NO. 1 BOARD (w/o Rear No. 2 Seat)
7. REMOVE DECK BOARD ASSEMBLY (w/o Rear No. 2 Seat)
8. REMOVE NO. 2 SEAT HINGE COVER LH (w/ Rear No. 2 Seat) (See page [SE-109](#))
9. REMOVE NO. 2 SEAT HINGE COVER RH (w/ Rear No. 2 Seat) (See page [IR-30](#))
10. REMOVE NO. 2 SEAT LEG COVER LH (w/ Rear No. 2 Seat) (See page [SE-109](#))
11. REMOVE NO. 2 SEAT LEG COVER RH (w/ Rear No. 2 Seat) (See page [IR-30](#))
12. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [SE-110](#))
13. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (w/ Rear No. 2 Seat) (See page [SE-110](#))
14. REMOVE REAR FLOOR NO. 2 BOARD
15. REMOVE REAR FLOOR NO. 3 BOARD
16. REMOVE REAR NO. 1 FLOOR MAT SUPPORT SIDE PLATE (See page [IR-31](#))
17. REMOVE BACK DOOR WEATHERSTRIP
18. REMOVE REAR FLOOR FINISH PLATE (See page [IR-31](#))
19. REMOVE REAR DECK TRIM COVER (w/ Rear No. 2 Seat)
20. REMOVE RECLINING REMOTE CONTROL LEVER BEZEL LH (w/o Rear No. 2 Seat)

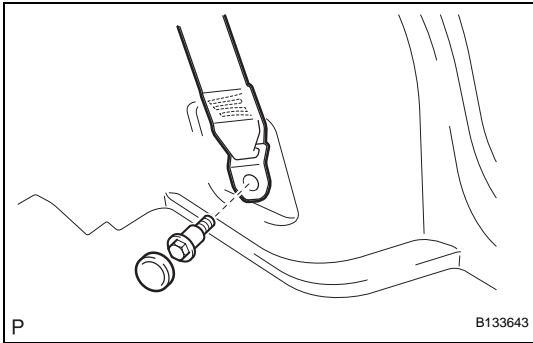

## 21. DISCONNECT REAR NO. 1 SEAT OUTER BELT ASSEMBLY RH

- Remove the lap belt outer anchor cover.
- Remove the bolt and disconnect the floor anchor.

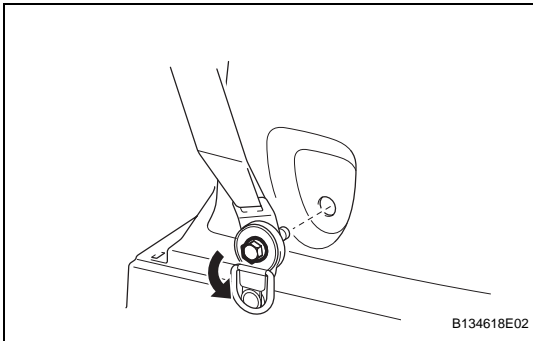

## 22. DISCONNECT REAR NO. 2 SEAT OUTER BELT ASSEMBLY LH (w/ Rear No. 2 Seat)

- Open the cover.
- Remove the bolt and disconnect the floor anchor.

## 23. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH (w/o Rear No. 2 Seat) (See page IR-32)

## 24. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH (w/ Rear No. 2 Seat) (See page IR-32)

## 25. REMOVE INNER ROOF SIDE GARNISH ASSEMBLY LH (w/o Rear No. 2 Seat) (See page IR-34)


## 26. REMOVE REAR NO. 2 SEAT OUTER BELT ASSEMBLY LH (w/ Rear No. 2 Seat)


- Using a screwdriver, detach the 2 claws and open the seat belt anchor cover as shown in the illustration.

HINT:

Tape the screwdriver tip before use.


- Remove the bolt and disconnect the seat belt's shoulder anchor.

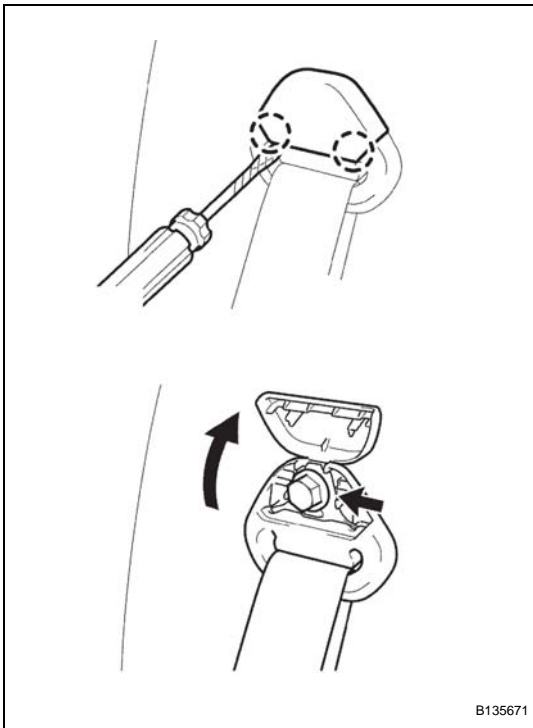

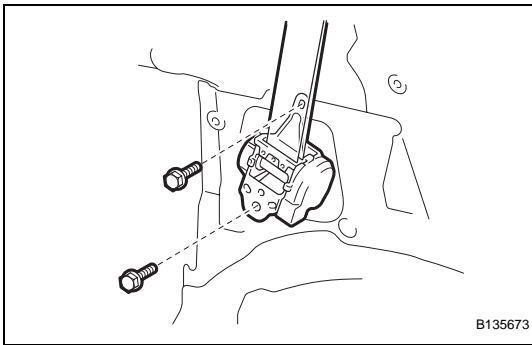


(c) Remove the 2 bolts and seat belt.

## 27. REMOVE INNER ROOF SIDE GARNISH ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [IR-35](#))

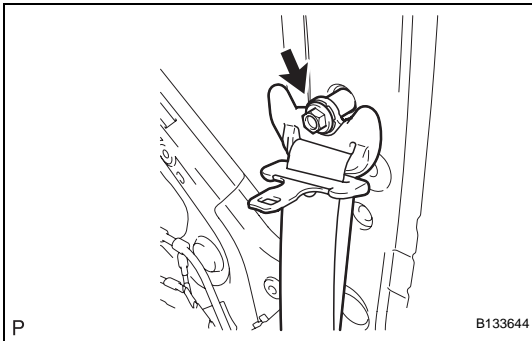


## 28. REMOVE REAR NO. 1 SEAT OUTER BELT ASSEMBLY LH

(a) Remove the bolt and disconnect the seat belt's shoulder anchor.

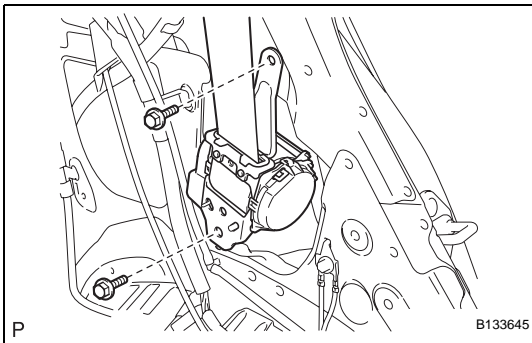

(b) Remove the 2 bolts and seat belt.

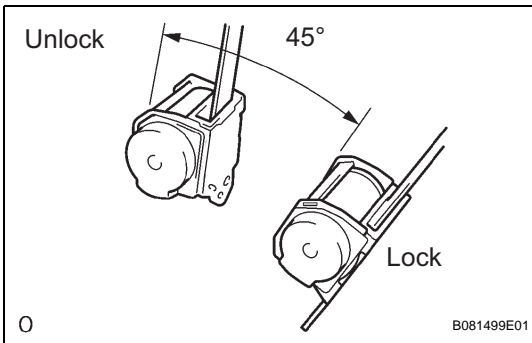


## INSPECTION

### 1. INSPECT REAR NO. 1 SEAT BELT ASSEMBLY OUTER

#### NOTICE:

**Do not disassemble the retractor.**

- (a) When the inclination of the retractor is 15° or less, check that the belt can be pulled from the retractor. When the inclination of the retractor is over 45°, check that the belt locks. If the operation is not as specified, replace the belt.

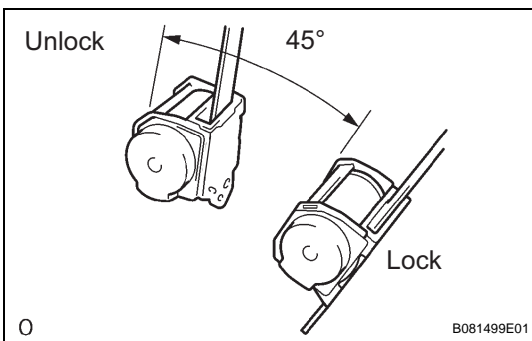

### 2. INSPECT REAR NO. 2 SEAT BELT ASSEMBLY OUTER

#### NOTICE:

**Do not disassemble the retractor.**

- (a) When the inclination of the retractor is 15° or less, check that the belt can be pulled from the retractor. When the inclination of the retractor is over 45°, check that the belt locks. If the operation is not as specified, replace the belt.

## INSTALLATION


### HINT:

- Use the same procedures for the LH side and RH side.
- The procedures listed below are for the LH side.
- A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

### 1. INSTALL REAR NO. 1 SEAT OUTER BELT ASSEMBLY LH

- (a) Align the claws with the seat belt positioning holes, and install the retractor of the seat belt with the 2 bolts as shown in the illustration.


**Torque: 8.5 N\*m (87 kgf\*cm, 75 in.\*lbf) for upper bolt**  
**42 N\*m (428 kgf\*cm, 31 ft.\*lbf) for lower bolt**

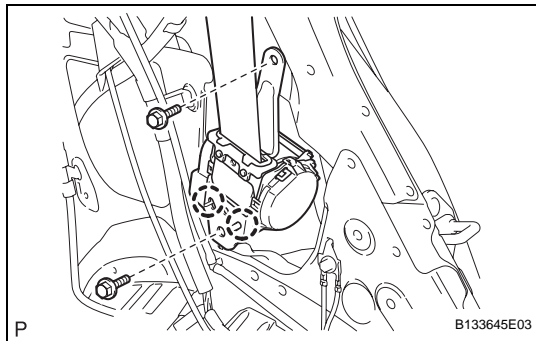

- (b) Connect the shoulder anchor with the bolt.

**Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)**


### 2. INSTALL INNER ROOF SIDE GARNISH ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [IR-52](#))

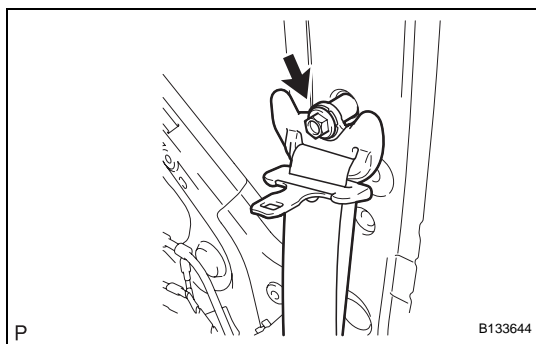

### 3. INSTALL REAR NO. 2 SEAT OUTER BELT ASSEMBLY LH (w/ Rear No. 2 Seat)

- (a) Align the claws with the seat belt positioning holes and install the retractor of the seat belt with the 2 bolts as shown in the illustration.

**Torque: 8.5 N\*m (87 kgf\*cm, 75 in.\*lbf) for upper bolt**  
**42 N\*m (428 kgf\*cm, 31 ft.\*lbf) for lower bolt**

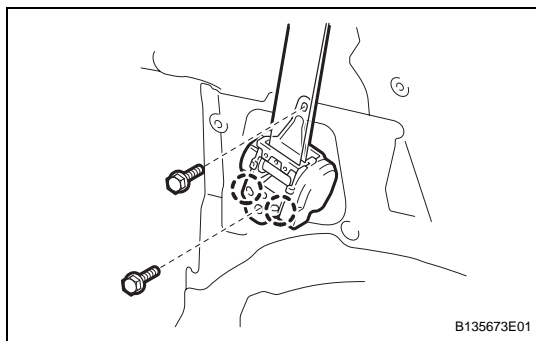

- (b) Connect the shoulder anchor with the bolt.


**Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)**

- (c) Close the cover cap.


### 4. INSTALL INNER ROOF SIDE GARNISH ASSEMBLY LH (w/o Rear No. 2 Seat) (See page [IR-51](#))

### 5. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [IR-53](#))

### 6. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH (w/o Rear No. 2 Seat) (See page [IR-52](#))

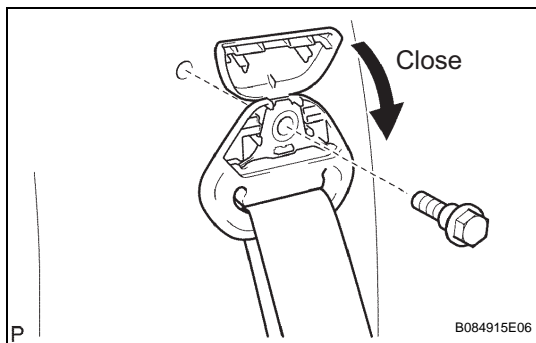




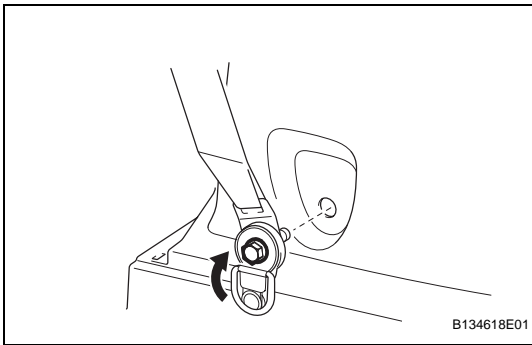

**7. CONNECT REAR NO. 2 SEAT OUTER BELT ASSEMBLY LH (w/ Rear No. 2 Seat)**

- (a) Connect the seat belt's floor anchor with the bolt.  
**Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)**
- (b) Close the cover.

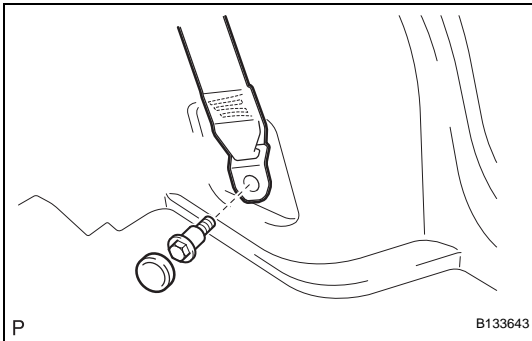

**8. CONNECT REAR NO. 1 SEAT OUTER BELT ASSEMBLY LH**

- (a) Connect the seat belt's floor anchor with the bolt.  
**Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)**
- (b) Attach the lap belt outer anchor cover.

**9. INSTALL RECLINING REMOTE CONTROL LEVER BEZEL LH (w/o Rear No. 2 Seat)**

**10. INSTALL REAR FLOOR FINISH PLATE (See page [IR-55](#))**

**11. INSTALL REAR NO. 1 FLOOR MAT SUPPORT SIDE PLATE (See page [IR-55](#))**

**12. INSTALL REAR FLOOR NO. 3 BOARD**

**13. INSTALL REAR FLOOR NO. 2 BOARD**

**14. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [SE-121](#))**

**15. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (w/ Rear No. 2 Seat) (See page [IR-55](#))**

**16. INSTALL NO. 2 SEAT LEG COVER LH (w/ Rear No. 2 Seat) (See page [SE-123](#))**

**17. INSTALL NO. 2 SEAT LEG COVER RH (w/ Rear No. 2 Seat) (See page [IR-56](#))**

**18. INSTALL NO. 2 SEAT HINGE COVER LH (w/ Rear No. 2 Seat) (See page [SE-123](#))**

**19. REMOVE NO. 2 SEAT HINGE COVER RH (w/ Rear No. 2 Seat) (See page [IR-56](#))**

**20. INSTALL DECK BOARD ASSEMBLY (w/o Rear No. 2 Seat)**

**21. INSTALL REAR FLOOR NO. 1 BOARD (w/o Rear No. 2 Seat)**

**22. INSTALL TONNEAU COVER ASSEMBLY (w/o Rear No. 2 Seat)**

**23. INSTALL PACKAGE TRAY TRIM POCKET SUB-ASSEMBLY (w/o Rear No. 2 Seat)**

**24. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH**

25. **INSTALL REAR DOOR SCUFF PLATE LH (See page [IR-57](#))**
26. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**